



## EMERGENCY STARTING PROCEDURE

### FOR D2866 WITH EMERGENCY HYDRAULICSTARTER

#### TO PREPARE THE START:

1. Visual control of the entire unit. If leakages or any changes are noted, they must be immediately removed according to operation instructions.
2. Check the fuel store and replenish if necessary.
3. Check lubrication oil level and replenish if necessary.
4. Check the cooling water level and replenish if necessary.
5. Generator circuit breaker must be switched off.

#### BEFORE STARTING:

6. (When existing): turn the "**starter battery switch**" into position "**off**"
7. Control panel: turn the operation switch "**off / auto / manual**" into position "**manual**"
8. Hydraulic accumulator: pressurize by using hand lever up to approx. 310 bar

#### TO START:

9. Hydraulic accumulator: pull the operating lever

When mains have returned and starter batteries are fully charged:

10. (When existing): turn the "**starter battery switch**" into position "**on**"